




## OSD Controls for Stealth Model# SV-640 LCD

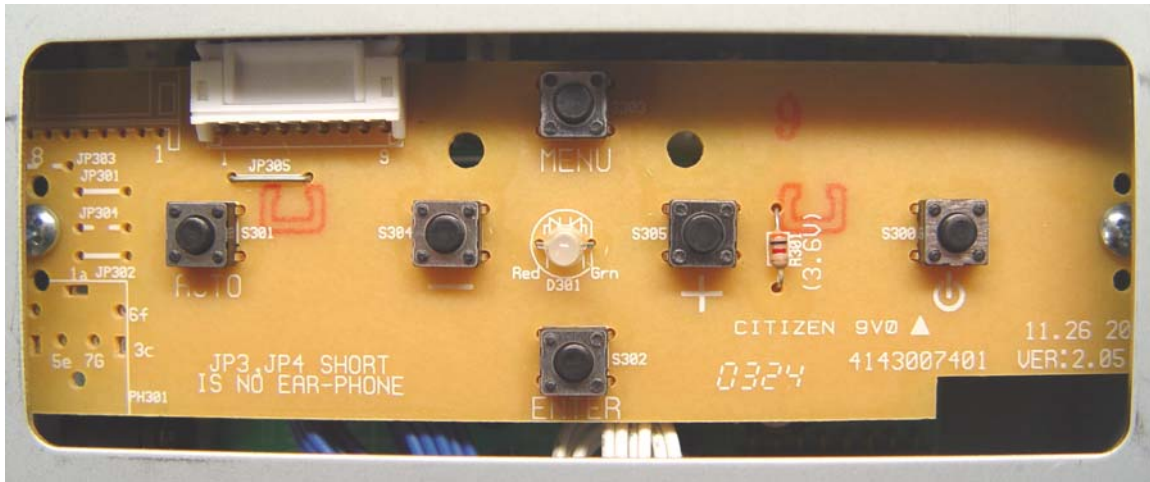

- Power on/off:** Turn on or turn off the monitor.
- +:** Go to next function/Increase the value.
- :** Go back to previous function/Decrease the value.
- Menu:** Enter the OSD Menu.
- Enter:** Enter the submenu/Save the value.
- Auto:** Automatically adjust the screen size to center.

## MAIN MENU:

**BRIGHTNESS:** Adjusts background black level of the screen image.

**CONTRAST:** Adjusts foreground white level of the screen image.

**LANGUAGE:** Allows you to choose from English, French, German, Italian, or Spanish.

**RESET:** Returns all controls back to default settings.



## DISPLAY ADJUST:

**V. POSITION:** Moves the screen image up or down.

**H. POSITION:** Moves the screen image left or right.

**PITCH:** Adjusts image distortion appearing as vertical bars or “noise” on the screen.


**PHASE:** Adjusts image distortion appearing as horizontal bars or “noise” on the screen.

**SHARPNESS:** Adjusts the clarity and focus of the screen image.

**AUTO TUNING:** Adjusts the picture and screen image to the best condition.

**RECALL:** return all controls back to default settings.

**RETURN:** Back to the previous menu.

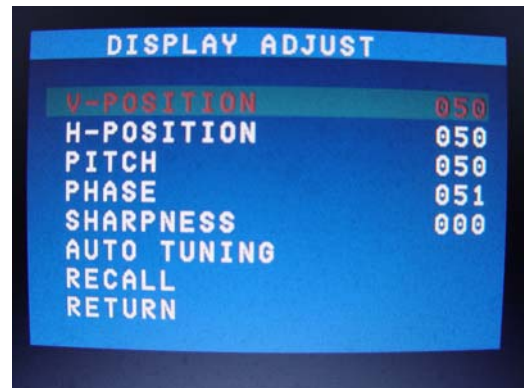

## COLOR TEMPERATURE:

**9300K:** Cool color

**7500K:** Neutral Color.

**6500K:** Warm Color.

**USER PRESET:** Adjusts the color by user manually.

**RECALL:** return color temperature back to default settings.

**RETURN:** Back to the previous menu.



## OSD ADJUST:

**OSD H-POS:** Moves the OSD screen image left or right.

**OSD V-POS:** Moves the screen image up or down.

**OSD TIMER:** Adjust the time for OSD to be appearance.

**TEA TIME:** Adjust the time for Break time.

**RECALL:** Return OSD AADJUST back to default settings.

**RETURN:** Back to the previous menu.

